1 Connect

Before connecting

Select the most suitable connection (A or B or C) based on the type of device you have and your home set up.
You can also refer to the accompanying User Manual for other possible connections.

A Connecting Recorder and TV
with antenna only

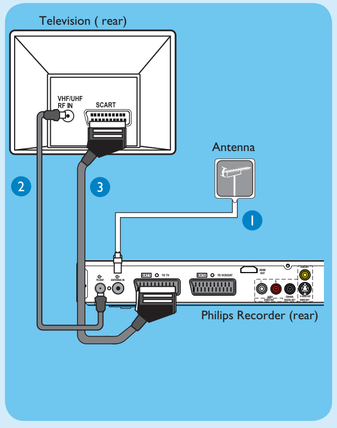

1. Unplug the existing antenna cable from your TV and connect it to the **ANTENNA IN** socket on this recorder.
2. Connect an RF antenna cable (supplied) from the **TV-OUT** socket on this recorder to the Antenna In socket on the TV.
3. Connect a scart cable (supplied) from the **EXT1-TO TV** scart socket on this recorder to the SCART socket on your TV.
4. Plug in the power cable from the recorder to an AC power outlet

B Connecting Recorder and TV
with Cable TV or Satellite Receiver

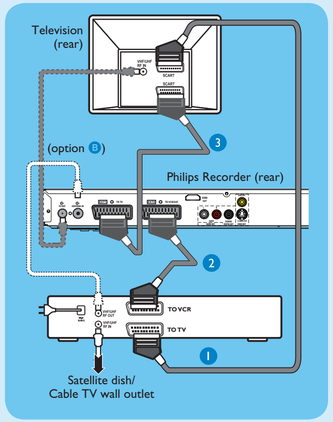

1. Keep the existing scart connection between the Cable Box/Satellite Receiver and your TV.
   - If your TV only has one Scart connector, then replace the scart connection with antenna connections (see option B).
2. Connect a scart cable (not supplied) from the **EXT2-TO VCR/SAT** scart socket on this recorder to the SCART (TO VCR) socket on the Cable Box/Satellite Receiver.
3. Connect a scart cable (supplied) from the **EXT1-TO TV** scart socket on this recorder to the SCART socket on your TV.
4. Plug in the power cable from the recorder to an AC power outlet

C Connecting Recorder, TV and VCR

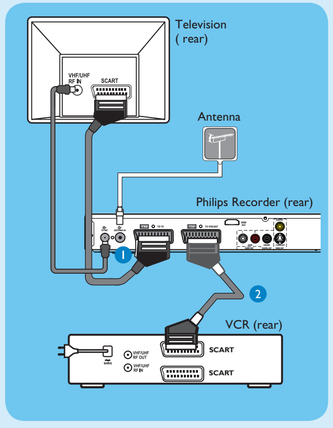

Note:
Your new Philips Recorder replaces the VCR for your recording needs. First, unplug all the connections from your VCR.

1. Follow A connection before you proceed to step 2 below.
2. Connect a scart cable (not supplied) from the **EXT2-TO VCR/SAT** scart socket on this recorder to the SCART socket on the VCR.
3. Plug in the power cable from the recorder to an AC power outlet

2 Set up

A Finding the viewing channel

1. Press **STANDBY-ON** on the recorder.
2. Turn on the TV.
   You should see the installation menu.

3. In case you don't see the recorder's setting menu, press the Channel Down button on the TVs remote control repeatedly (or AV, SELECT, ⇥ button) until you see the menu. This is the correct viewing channel for the recorder.

B Start initial installation

Use the recorder's remote control and follow the on-screen instructions to complete the installation.

1. Select the desired menu language, your country and the TV shape.

   Note Press **OK** or the **Green** button on the remote control to go to the next screen.

2. Press **OK** to start automatic analogue channel search.



3. Once complete, press the **Green** button to continue.

4. Enter the correct time in the entry field, press **OK** followed by the **Green** button to continue. Proceed the same for date entry.
5. The installation is completed now, press the **Green** button to close the menu.

3 Enjoy

About the Time Shift Buffer (TSB)

Once you turn on the recorder, the selected TV programme will be stored in a temporary hard disk storage called Time Shift Buffer '**TSB**'. The '**TSB**' can store up to 6 hours of programmes temporarily.

Press **INFO** to display the Time Shift video bar.

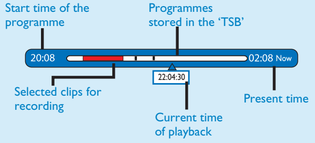

Notes:
- The contents in the time shift video bar will be cleared when you press **STANDBY ON (⏻)**.
- The blue LED on the recorder will be lit up when the Time Shift Buffer is active or when you playback a recording from the hard disk drive.

Watch TV – Pause live TV

Your Philips Recorder allows you to control the TV programme. You can PAUSE it as if you were in control of the live broadcast.

1. Turn on your recorder to the live TV mode and press **P** +/— to select a TV programme.
2. Press **PAUSE LIVE TV** to suspend it.
3. Press **PAUSE LIVE TV** again to continue.
4. To return to live broadcast, press **LIVE TV**.

Colour Softkeys function

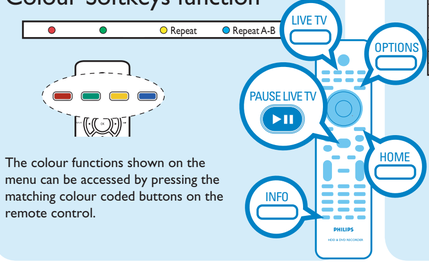

The colour functions shown on the menu can be accessed by pressing the matching colour coded buttons on the remote control.

About the internal hard disk drive

This recorder's hard disk drive can be used as a Media Jukebox, allowing you to store and playback your TV programmes, videos, music and photos files.

Press **HOME** on the remote control to access your contents stored in the { Hard Disk }.

Select a record mode

Select an appropriate recording mode is important as it determines the picture quality and recording time to the hard disk.

1. Before recording, press **OPTIONS** on the remote control.
2. Select { **Settings** } in the menu and press **OK**.
3. Move to { **Recording** } and press ▶ **right**.
4. Move to { **Record mode** } and press ▶ **right**.
5. Select a record mode and press **OK** to confirm.

DVDR3575H / DVDR3577H

Record Mode	Hours of recordings can be stored on the HDD or an empty DVD recordable disc.		
	HDD (160 GB)	DVD±R/ DVD±RW	DVD+R Double Layer
HQ (high quality)	23	1	1 hr 55 mins
SP (standard play)	45	2	3 hrs 40 mins
SPP (standard play plus)	56	2.5	4 hrs 35 mins
LP (long play)	68	3	5 hrs 30 mins
EP (extended play)	90	4	7 hrs 20 mins
SLP (super long play)	135	6	11 hrs 5 mins
SEP (super extended play)	180	8	14 hrs 45 mins

DVDR3595H / DVDR3597H

Record Mode	Hours of recordings can be stored on the HDD or an empty DVD recordable disc.		
	HDD (250GB)	DVD±R/ DVD±RW	DVD+R Double Layer
HQ (high quality)	40	1	1 hr 55 mins
SP (standard play)	77	2	3 hrs 40 mins
SPP (standard play plus)	96	2.5	4 hrs 35 mins
LP (long play)	115	3	5 hrs 30 mins
EP (extended play)	153	4	7 hrs 20 mins
SLP (super long play)	230	6	11 hrs 5 mins
SEP (super extended play)	300	8	14 hrs 45 mins

3 Enjoy

Record/Copy to hard disk

A Record current TV programme

1. Press **REC** to start recording. It can record up to 6 hours.

Note To set the recording time length, press **REC** repeatedly to extend the recording time in 30-minute increments, up to 6 hours.

2. To stop the recording before the scheduled time, press **STOP**.

B Mark a specific content in the Time Shift Buffer for recording

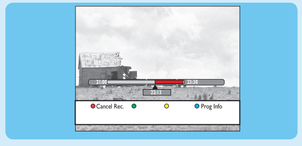

1. Press ◀ **left** or ▶ **right** to search for the scene where you want to record.
2. Press **REC** to start recording from here.

Note Pressing the **Red** button will cancel the recording.

3. Press ▶ **right** to search for the scene to end the recording, then press **STOP**.

Note The title will be marked in red and the recording will only take effect when you turn off the recorder.

C Copy TV programmes from hard disk

1. Insert a recordable DVD into the recorder.
2. Press **HDD LIST** on the remote control.
3. Select a title to copy and press the **Green** button on the remote control for { **Copy** }.
4. The making disc copy information appears. Press the **Green** button again to start copying.

Note It is not possible to copy the TV recordings to USB device.

D Copy files from USB

You can only copy the data files (MP3, WMA, DivX and JPEG) from your USB device to the recorder's hard disk drive or recordable DVD.

1. Insert your USB device to the USB port at the front panel of the recorder.
2. Press **USB** on the remote control to view the content menu.
3. Use ◀▶▲▼ keys to reach the file you want to copy.
4. Press the **Green** button on the remote control for { **Copy** }.



5. Select the destination for copying and press **OK** to confirm.

Note If select { To Disc }, insert an empty recordable DVD into the recorder.

6. Press **OK** again to start copying.

E Copy files from Disc

Copy prohibited contents cannot be copied to this recorder.

1. Insert a CD/DVD into the recorder.
2. Press **HOME** and select { **Disc Tray** }.
3. Use ◀▶▲▼ keys to reach the title/file you want to copy.
4. Press the **Green** button on the remote control for { **Copy** }.



5. Select the destination for copying and press **OK** to confirm.

Note Only data files are able to copy to USB device.

6. Press **OK** again to start copying.

Start playback

A Playback from hard disk

1. Press **HOME**.
2. Select { **Hard Disk** } and press ▶ **right**.
3. Select the contents type and press ▶ **right**.
4. Use ◀ ▶ ▲ ▼ keys to reach the title/file you want to play and press ▶II to start playback.

B Playback from disc

1. Hold down **STOP** until the disc tray opens. Load a disc and close the disc tray.
2. Press **HOME** and select { **Disc Tray** }.

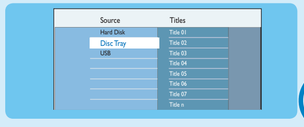

3. Use ◀ ▶ ▲ ▼ keys to reach the title/file you want to play and press ▶II to start playback.

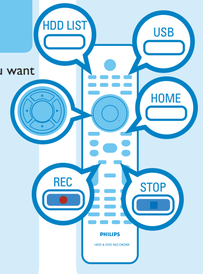

C Playback from USB device

1. Insert the USB device to the USB socket.
2. Press **USB** to show the contents list.

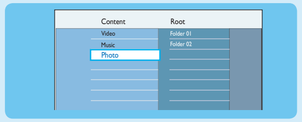

3. Select the contents type and press ▶ **right**.
4. Select a data file (MP3, WMA, DivX and JPEG) and press ▶II to start playback.

Need help?

User Manual

See the user manual that came with your Philips Recorder

Online

Register your product and get support at www.philips.com/welcome

Be responsible
Respect copyrights

2007 © Koninklijke Philips N.V.
All rights reserved.
12 NC 3139 245 28451
www.philips.com

DVDR3575H / DVDR3577H
DVDR3595H / DVDR3597H

Quick Start Guide

1 Connect
2 Set up
3 Enjoy

What's in the box?



Hard Disk/ DVD Recorder



Remote Control and 2 batteries

RF antenna cable (connect between recorder and TV)

Scart cable

User Manual

PHILIPS